WELCOME

Speed Brew Manual

WHY BUNN?

Since 1957, restaurants and cafés have chosen BUNN as their trusted coffeemaker, realizing that a BUNN-brewed cup of coffee is a fine cup of coffee. For over 50 years, we've built our business with a very simple mission: to create the best coffee experience possible by building the best coffeemakers possible. What we started then, we continue today. We're proud to be a company based on honesty, hard work and a passion for great coffee, wherever it is served, your home included! It's about the feeling we want you to have every time you enjoy coffee made by the brewer inside this box. Great coffee is just moments away.

WHAT'S INSIDE

LET'S GET STARTED 5

MEET SPEED BREW 7

SETUP 8

LET'S BE SAFE 10

LET'S BREW 101 13

THE BASICS 15

LET'S KEEP IT CLEAN 17

BASIC CLEANING 18

CLEANING THE SPRAYHEAD TUBE 18

DEEP CLEANING 19

DRAINING BREWER 21

LET'S SOLVE 22

LEGAL MUMBO JUMBO 25

LET'S GET STARTED

PLEASE FOLLOW THESE DIRECTIONS TO A TEE.

Record the Model and Date Code before using. The Model and date code are located on the bottom of your brewer.

MODEL: Speed Brew

DATE CODE: _____

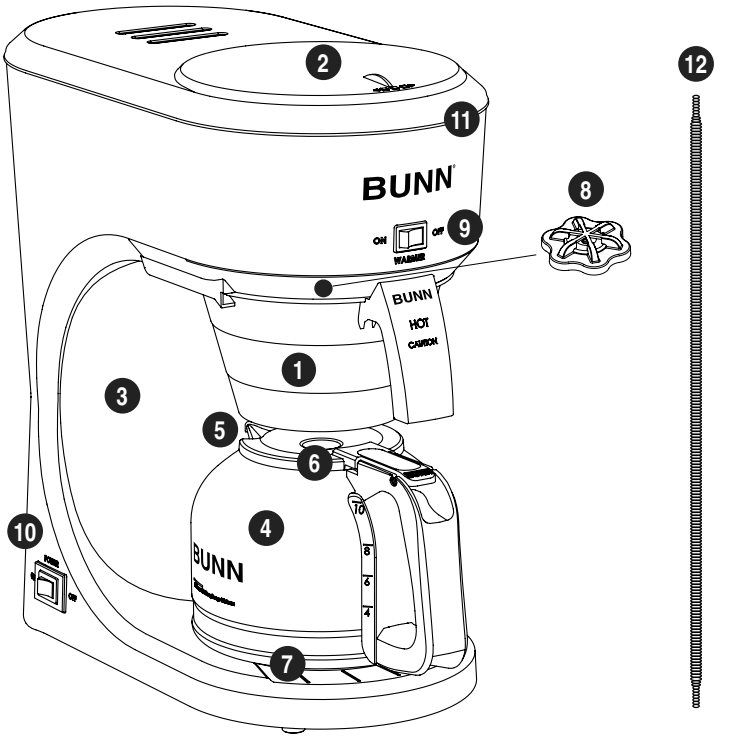

Questions?
Go to bunn.com or call
USA 1-800-352-2866
Canada 1-800-263-2256
Please have your Model and Date Code ready when calling for service.

49740.0000B 2/15
© 2015 BUNN-O-MATIC CORPORATION

MEET YOUR SPEED BREW

FEATURES

1. Brew Funnel
2. Lid
3. Internal Hot Water Tank
4. Drip-Free Pour-O-Matic™ Glass Carafe
5. Drip-Free Spout
6. Carafe Lid
7. Warmer Plate
8. Sprayhead
9. Warmer Switch
10. Tank Switch
11. Pour-In Bowl
12. Deliming Tool

PLEASE READ ALL THESE INSTRUCTIONS BEFORE STARTING. YOU'LL LEARN HOW TO CARE FOR YOUR NEW MACHINE. MORE IMPORTANTLY, YOU'LL KNOW HOW TO BREW THE MOST AMAZING COFFEE YOU'VE EVER TASTED.

SPECIFICATIONS

Brew Capacity: 4–10 5 oz. cups per batch.

Electrical: UL and C-UL Listed FOR HOUSEHOLD USE ONLY. Brewer has an attached, 3-prong grounded cord set and requires 2-wire service with ground, rated 120 volts AC. 7 amps, single phase, 60 Hz., 900-watts total.

High-altitude use: If you live above an altitude of 4,000 ft., make sure your coffee machine has a "D" designation found on bottom of your machine.

SETUP

DO NOT PLUG IN UNTIL STEP 4, OR YOU RISK PERMANENTLY DAMAGING THE MACHINE. AND WE DON'T WANT THAT ANY MORE THAN YOU DO.

It takes 2 full Carafes of cold water to fill the Internal Hot Water Tank and prepare your machine for brewing. Here's how to get started:

1. SLIDE EMPTY BREW FUNNEL INTO BREWER

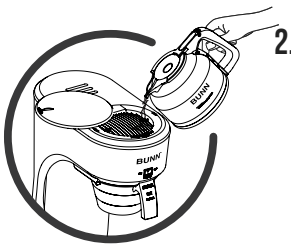

2. FILL CARAFE WITH COLD WATER

- Pour water into brewer.
- Position Carafe on Warmer Plate.
- Close Lid.
- Wait 4 minutes.

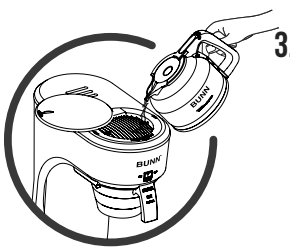

3. DO STEP 2 AGAIN

- Wait until water flows into the Carafe.
- Then pour out water in Carafe.
- Reposition Carafe on Warmer Plate.

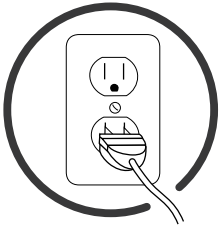

4. ALMOST READY

- Plug in the brewer.

5. TURN ON BREWER

- Press Tank Switch on side to ON position.
- Wait 15 minutes for water to heat (you only do this once for life of brewer, so don't fret).
- Keep Tank Switch on (unless you're taking that much-needed vacation).
- Then be sensible and shut it off.

LET’S BE SAFE

SAFEGUARDING

IMPORTANT. NO, REALLY, THIS IS IMPORTANT.

Follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock and personal injury.

- READ ALL THE INSTRUCTIONS IN THIS MANUAL
- Hot liquids can burn you.
- Do not touch hot surfaces. Use handles.
- Do not place cord, plugs or brewer in water or other liquids.
- Do not open Lid during heating or brewing phases.
- Close supervision is necessary when brewer is used around children.
- Internal Hot Water Tank contains hot water. Before cleaning, removing or replacing parts, unplug brewer and let it cool (up to 2 hours.)
- Do not operate brewer with a damaged cord or plug, or any other malfunction or damage.
- Using an accessory not evaluated for use with this brewer may cause injury.
- Use brewer indoors only.
- Do not let cord hang over edge of table or counter.
- Do not place brewer in or near a hot gas or electric burner, or in a heated oven.
- Do not use Carafe on a range top or in a microwave.
- Do not use brewer for any purpose other than its intended use.
- Do not remove Brew Funnel or Carafe while brewing.
- Do not set a hot Carafe on a cold surface.
- Do not use a cracked Carafe or a Carafe with a loose or weakened handle.
- Do not pour any liquid into the Internal Hot Water Tank other than water or vinegar for cleaning, as specified in this manual.
- Do not clean carafe with cleansers, steel wool pads, or other abrasive materials.
- When brewer is not in use, keep Lid in the closed position.

SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

WARNING
RISK OF FIRE OR ELECTRICAL SHOCK
TO REDUCE RISK OF FIRE OR ELECTRIC SHOCK
DO NOT DISASSEMBLE THE BREWER
NO USER-SERVICEABLE PARTS INSIDE
REPAIR SHOULD BE DONE BY AUTHORIZED
SERVICE PERSONNEL ONLY

This symbol alerts you to important operating and service instructions.

This symbol alerts you to the risk of fire or electric shock in the accompanying message.

NOTE: The short power-supply cord provided reduces the risk of becoming entangled in or tripping over a longer cord. If an extension cord is used, its marked electrical rating must be at least as great as the electrical rating of the brewer. Make sure the extension cord does not hang over the edge of a table or counter and that it cannot be pulled on by children or tripped over. The extension cord must be a 3-wire cord of the 3-pronged, 3-socketed, grounding type (including grounding conductor).

LET'S BREW 101

LET'S BREW 101

WE APPLAUD YOUR SMART DECISION IN PURCHASING THIS BUNN SPEED BREW. YOU'RE ABOUT TO ENJOY YEARS AND YEARS OF BETTER COFFEE.

How, you ask?

It's called The BUNN Difference. A finely-tuned calibration of time, temperature and turbulence that extracts maximum flavor from coffee in the minimum amount of time.

TIME
Quick 4-minute brew time ensures coffee is never bitter.

TEMPERATURE
Internal Hot Water Tank heats water to the optimal temperature range.

TURBULENCE
Created in the brew funnel as water uniformly showers over coffee, resulting in smooth flavor. (We coffee geeks call this uniformity of extraction.)

THE BASICS

1. Place BUNN® coffee filter into Brew Funnel.
2. Scoop fresh ground coffee into filter.
3. Shake Brew Funnel gently to level grounds.
4. Slide Brew Funnel into brewer.
5. Fill Carafe with cold water.
6. 20 oz. for 4 cups. 50 oz. for 10 cups.
7. And everywhere in between.
8. Spin Lid to open.
9. Pour water into brewer.
10. Position Carafe on Warmer Plate.
11. Turn on Warmer Switch.
12. Close Lid.
13. Wait 4 minutes.

POUR A CUP OF COFFEE. ADD YOUR FIXINGS.

FOR MORE TIPS, VISIT BUNN.COM

LET'S KEEP IT CLEAN

BASIC CLEANING

Wash Brew Funnel and glass Carafe after each use. If you have a dishwasher, go that route.

IÜortant: separate Carafe Lid from Carafe to place in dishwasher, using top shelf only for both glass and Lid. If you go the wash-by-hand route, use a mild, non-abrasive dish soap. Be sure to use edge of sponge or corner of dish towel to clean every nook and cranny.

Wipe the outside of the brewer occasionally, including area above the Brew Funnel.

If you're a neat freak, do it more than occasionally.

CLEANING THE SPRAYHEAD TUBE

Cleaning the Sprayhead Tube removes deposits due to natural mineral content in your water. The more mineral content in your water, the more you should clean.

A good rule of thumb is to do it every 3 months, unless you have very hard water then twice a month may be necessary.

You'll need: metal Deliming Tool provided with your machine, toothpick, dish soap, soft cloth.

Flip the Tank Switch to the OFF position, unplug brewer and allow to cool for at least 2 hours.

Remove funnel and unscrew Sprayhead.

Insert all but 2 inches of the Deliming Tool into Sprayhead Tube.

Slide Deliming Tool in and out of Sprayhead Tube 5-6 times to loosen any deposits.

Remove Deliming Tool and reinsert the Brew Funnel. Pour a Carafe of fresh water into brewer.

Place empty Carafe on Warmer Plate and close Lid. Water will flow into Carafe.

Check Sprayhead holes and clear any deposits with a toothpick.

Clean Sprayhead with a cloth and dish soap. Rinse with water.

Empty water from Carafe and place empty Carafe on Warmer Plate.

Remove Brew Funnel and reinstall Sprayhead. Reinsert Brew Funnel.

Plug in. Position Tank Switch to the ON position.

Wait 15 minutes for water in tank to reach brew temperature. All clean.

DEEP CLEANING

DEEP CLEAN BREWER AT LEAST EVERY 3 MONTHS. FREQUENCY DEPENDS ON MINERAL CONTENT IN YOUR WATER.

Deep cleaning your brewer removes mineral deposits in your Internal Hot Water Tank and will prolong the life of your Speed Brew.

You'll need: 1 Quart (4 cups) of white vinegar, toothpick and dish soap.

Slide empty Brew Funnel onto the brewer.

Place empty Carafe on brewer.

Open Lid and pour vinegar into brewer.

Close Lid. Empty Carafe when liquid stops flowing.

Flip the Tank Switch to the OFF position and unplug. Allow vinegar to sit in the brewer for at least 2 hours.

Remove the Brew Funnel and unscrew the Sprayhead. Check Sprayhead holes and clear any deposits with toothpick.

Clean Sprayhead with a cloth and dish soap. Rinse with water.

Pour a Carafe of fresh water into brewer. Place empty Carafe on Warmer Plate and reinsert Brew Funnel.

Close Lid (the water will begin to flush out the vinegar from the Internal Hot Water Tank).

Empty Carafe when water has stopped flowing.

Repeat the process of cycling fresh cold water 3 or more times or until you no longer smell vinegar.

Remove Brew Funnel and reattach Sprayhead.

Replace Brew Funnel and place Carafe on Warmer Plate. Plug in. Position Tank Switch to the ON position.

Allow water in tank to reach brewing temperature. Which should take about 15 minutes.

Then brew away.

DRAINING BREWER

WATER IN BREWER SHOULD BE DRAINED WHEN BREWER IS:

- Transported
- Shipped
- Stored in an unheated location with chance of freezing
- Not to be used for an extended period of time

TO DRAIN:

Flip the Tank Switch to the OFF position, unplug brewer and allow to cool for at least 2 hours.

Remove Brew Funnel and Sprayhead.

Grasp back of brewer and turn it upside down over sink.

Continue tipping brewer until flow from Sprayhead Tube and Lid stops.

Return Sprayhead and Brew Funnel to brewer.

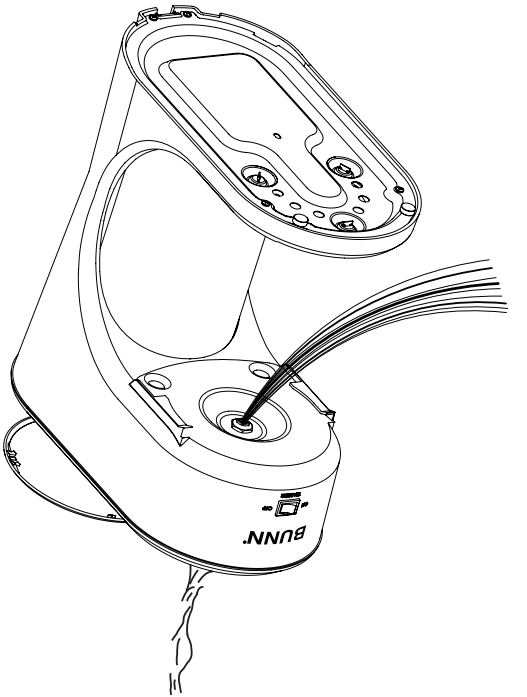

LET’S SOLVE

PROBLEM & SOLUTION

COFFEE DOESN'T COME OUT

- Go thru Setup process again (see page 8).
- Close Lid.
- Refill Hot Water Tank if water evaporation has occurred.
- Check Sprayhead holes.

MACHINE ONLY PARTIALLY BREWED

- Refill Internal Hot Water Tank if water evaporation has occurred.
- You may need to increase water if coffee grounds and filter absorbed some water.

COFFEE IS NOT STAYING HOT

- Make sure Warmer Switch is ON.

COFFEE IS COLD

- Plug in brewer.
- Turn on Tank Switch.
- Allow 15 minutes for water to heat.

FUNNEL IS OVERFLOWING

- Use BUNN® paper filters.
  You can order more filters at bunn.com
- Check to make sure Sprayhead is in place.
- If you brew decaf, fine grind or use soft water, request a special flow restrictor sprayhead by completing a Parts Form on BUNN.com or by contacting us at 800-352-BUNN.

BREWER MAKES RUMBLING NOISE

- This is normal while water is heating.
- Clean the Sprayhead Tube (see page 18).

WATER FLOWS BEFORE LID IS CLOSED

- Make sure Lid is completely open to activate rubber stopper in Pour-In-Bowl.
- Brewer not designed to hold water in Pour-In-Bowl overnight.
- Remove top Lid to ensure rubber stopper is in place and area is clean.

DELIMING TOOL DOESN'T GO IN ALL THE WAY

- Follow Sprayhead Tube cleaning (see page 18). You may need to use a little muscle.

BREWER LEAKS

- Call 1-800-352-2866 or visit bunn.com.

AND PLEASE, NEVER DISASSEMBLE THE BREWER. THERE ARE NO USER SERVICEABLE PARTS INSIDE.

LEGAL

Bunn-O-Matic warrants the BUNN Speed Brew Coffee Brewer, except glass carafe, to be free from defects in materials and workmanship existing at the time of manufacture and appearing within the later of the following warranty periods:

a) Three (3) years from the date of original purchase of a NEW BREWER; or

b) In the case of a REPAIRED OR REPLACEMENT BREWER returned to Bunn-O-Matic before the new Brewer warranty has expired (1) year from the date REPAIRED OR REPLACEMENT BREWER is received by customer.

If such a defect appears during the warranty period, we will (at our sole option) repair or replace the defective Brewer with no charge for service or parts, provided Brewer is delivered at the customer's expense to one of our authorized service centers (see page 6 for customer service info).

Warranty does not cover claims resulting from misuse, failure to follow instructions on installation and use, use with water having a high mineral content, neglect, use of unauthorized attachments, commercial use, use on a current or voltage other than specified on the Brewer, or unauthorized service during the warranty period on conditions otherwise covered by warranty.

THIS WARRANTY SHALL BE EXCLUSIVE AND SHALL BE IN LIEU OF ANY OTHER WARRANTY, WRITTEN, ORAL, OR IMPLIED INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. In any event, the duration of any implied warranties, including but not limited to any implied warranties of merchantability or fitness for a particular purpose, is expressly limited to the period of duration of this limited warranty.

Some states do not allow time limitations implied warranties, so the above limitation may not apply to you.

MORE LEGAL MUMBO JUMBO

The customer's exclusive remedy for breach of this warranty or of any implied warranty or of any other obligation arising by operation of law or otherwise shall be limited as specified herein to repair or replacement, at our sole option. In any event, responsibility for special, incidental and consequential damages is expressly excluded.

Some states do not allow limitation or exclusion of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights; you may have other rights, which vary from state to state.

Great coffee is just moments away

ENJOY

BUNN®